AiM Infotech

Subaru Legacy 1999-2011 ECU

Release 1.05







1

Wiring connection

This tutorial explains how to connect AiM devices to Subaru cars to AiM devices. Suported models and years are:

• Subaru Legacy 1999-2011.

Please note: for **MXL** loggers you need to buy the proper Plug&Play kit you find on AiM website at www.aim-sportline.com download area, stock ECU section.

2

Wiring connection


Subaru Legacy feature a bus communication protocol based on K Line on the OBDII plug placed on the car driver side left of the steering column as shown here below.







The ECU communicates using the K line on the OBDII connector. Connector pinout as well as connection table are shown here below.

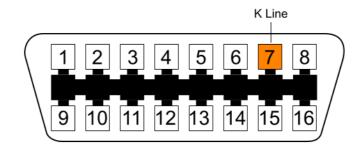

OBDII connector pin	Pin function	AiM cable
7	K line	K line

Please note: we recommend you to use AiM cables to connect AiM devices. Their part number are:

•	ECU Bridge with OBDII plug		X90BGCK12MA
•	EVO4 cable (to be plugged in EVO4 connector labelled RPM)		V02563050
•	 SoloDL cable with OBDII plug 		V02569010 (2m length) or
			V02569090 (1,2m length)
•	MXG	37 pins standard cable	V02573010
•	MXS	37 pins standard cable	V02573010
•	MXL2	37 pins standard cable	V02573010

3

AiM device configuration

Before connecting the ECU to AiM device set this up using AiM Race Studio software. The parameters to select in the device configuration are:

- ECU manufacturer "Subaru" and
- ECU Model:
 - o "SSM 1999/2007" for cars produced between 1999 and 2007
 - o "SSM 2008/2011" for cars produced between 2008 and 2011



4

Available channels

Channel sampled by AiM loggers changes according to the selected protocol are:

4.1 "Subaru" "SSM 1999/2007" protocol

Channels received by AiM loggers connected to "Subaru" "SSM 1999/2007" are:

ID	CHANNEL NAME	FUNCTION
ECU_1	RPM	RPM
ECU_2	SPEED	Vehicle Speed
ECU_3	TPS	Throttle Position Sensor
ECU_4	ECT	Engine coolant temperature
ECU_5	TURBO_PRESS	Turbo pressure
ECU_6	IN_VVT_R	Right bank inlet timing
ECU_7	IN_VVT_L	Left bank inlet timing
ECU_8	IGN_ADV	Ignition advance
ECU_9	KNOCK_CORR	Advances correction depending on detonation sensor
ECU_10	FUEL_LEV	Fuel level
ECU_11	NEUTRAL	Neutral sensor
ECU_12	CLUTCH	Clutch disengaged signal
ECU_13	BRAKE	Brake switch
ECU_14	ENG_LOAD	Instant engine load
ECU_15	AIR_FLOW	Air flow in the air pipes

Technical note: not all data channels outlined in the ECU template are validated for each manufacturer model or variant; some of the outlined channels are model and year specific and therefore may not be applicable.



4.2 "Subaru" "SSM 2008/2011" protocol

Channels received by AiM loggers connected to "Subaru" "SSM 2008/2011" are:

ID	CHANNEL NAME	FUNCTION
ECU_1	SSM_RPM	RPM
ECU_2	SSM_SPEED	Vehicle Speed
ECU_3	SSM_TPS	Throttle Position Sensor
ECU_4	SSM_ECT	Engine coolant temperature
ECU_5	SSM_TURBO_PRES	Turbo pressure
ECU_6	SSM_IN_VVT_R	Right bank inlet timing
ECU_7	SSM_IN_VVT_L	Left bank inlet timing
ECU_8	SSM_IGN_ADV	Ignition advance
ECU_9	SSM_KNOCK_CORR	Advances correction depending on detonation sensor
ECU_10	SSM_FUEL_LEV	Fuel level
ECU_11	SSM_NEUTRAL	Neutral sensor
ECU_12	SSM_CLUTCH	Clutch disengaged signal
ECU_13	SSM_BRAKE	Brake switch
ECU_14	SSM_ENG_LOAD	Instant engine load
ECU_15	SSM_AIR_FLOW	Air flow in the air pipes
ECU_16	SSM_EX_VVT_R	Right bank exhaust timing
ECU_17	SSM_EX_VVT_L	Left bank exhaust timing
ECU_18	SSM_SEL_MAP	Selected Map
ECU_19	SSM_GEAR	Engaged gear

Technical note: not all data channels outlined in the ECU template are validated for each manufacturer model or variant; some of the outlined channels are model and year specific and therefore may not be applicable.